
Pacific Flow Indicator 1

Pacific Flow Indicator 1

This product is intended for installation only by expert users. Please consult with a qualified technician for installation. Improper installation may result in damage to your equipment.

- 1. Please carefully read the manual before beginning the installation process!
- 2. It is strongly recommended to use market proven pre-mix coolant, such as Thermaltake Coolant 1000.
- 3. DO NOT USE any kind of alcohol or alcohol derivatives with this reservoir or the acrylic tube may crack and fail! Do not clean it using alcohol either!

Installation Guide

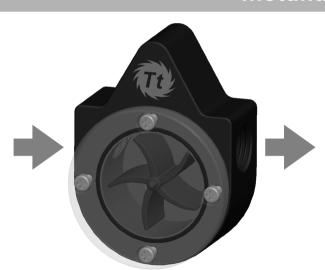

Install your fittings and tubes, remember to use the right as an outlet and left as an inlet.



